


Instruction for PDK USB/Power interface PLEO rb


1. Insert the USB cable pass through the PDK battery pack

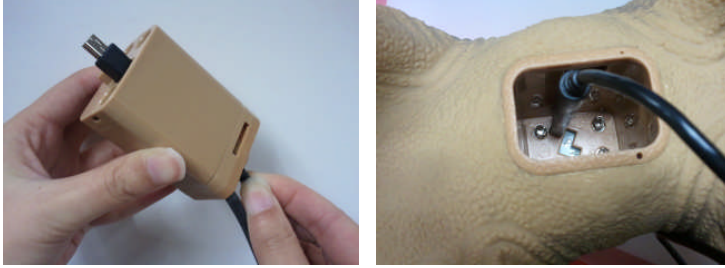


2. Connect the mini USB with Pleo rb.
3. Insert the PDK battery pack into the Pleo rb's belly and turn the locking latch till locked the battery pack in the Pleo rb.



4. Connect the Power Supply with 4A; 7.4V in proper terminals (RED for "+" ; BLACK for "-").

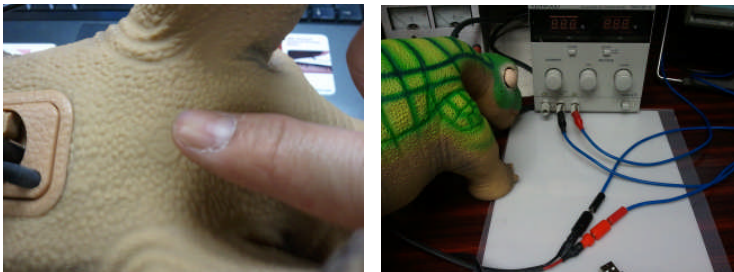

5. Power on the PLEO rb (Press the ON/OFF button once)
6. Connect the USB terminal to your PC

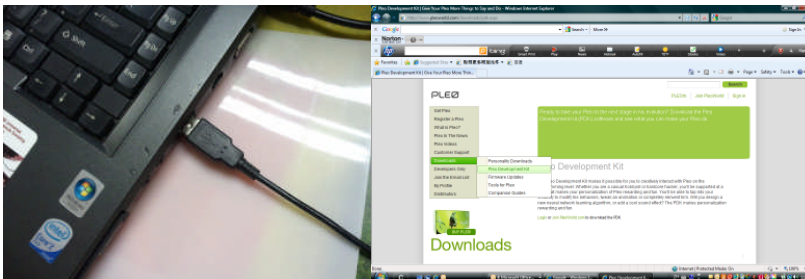

7. Monitor the PLEO rb with the correct driver (you can download the driver from www.pleoworld.com).